



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands IR Commands

Power On	Volume Up	Reset	Freeze
Power Off	Volume Down	Zoom Up	Magnify Up
Source: VIDEO	Menu	Zoom Down	Magnify Down
Source: RGB 1	Adj Up	Focus Up	Blank
Source: RGB 2	Adj Down	Focus Down	
	Adj Left	Timer	
	Adj Right	Mute	


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 80 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female HD15 as follows:

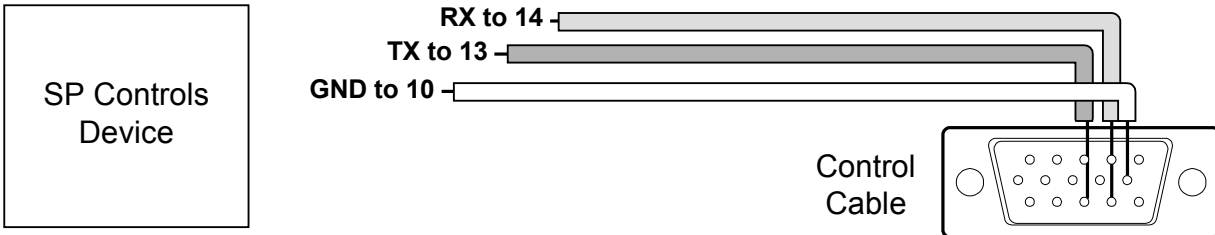

Connect female HD15 to projector port labeled *CONTROL*.
Serial Adapters (for NRC only): B, C, and D

III. Projector Configuration

The MP8670 must be configured in the following way for use with this driver:

Baud Rate 9600: Set the projector to 9600bps in the onscreen OPT. (OPTIONS) Menu: COM. SPEED setting.

Data Word 8N1: Set the projector to use data word 8N1 in the onscreen OPT. (OPTIONS) Menu: COM. BITS setting.