



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands

Power On	Source: Video 1	Menu
Power Off	Source: Video 2	Adj Up
Volume (Absolute)	Source: Video 3	Adj Down
Blank On	Source: Computer 1	Select
Blank Off	Source: Computer 2	Mute On
	Source: Computer 3	Mute Off


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 90 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

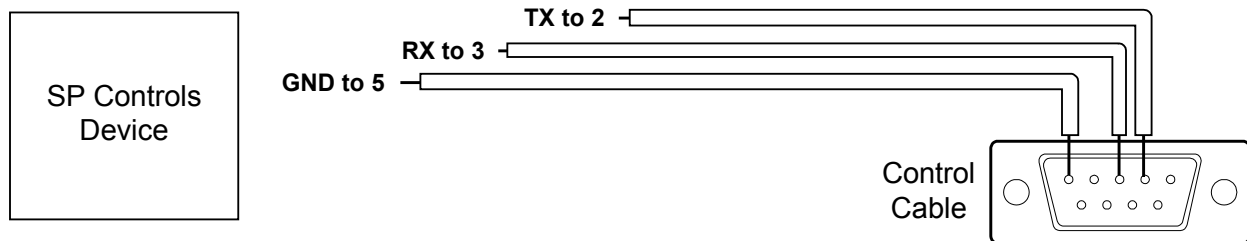

Connect female DB9 to projector port labeled *Serial Control*.
Serial Adapters (for NRC only): None

III. Projector Configuration

Set Auto Source to OFF– Using the ASK Proxima menus navigate to the *Sources* menu, which is found inside the *Settings* menu, and **UNCHECK** the *AUTO SOURCE* option.

Set Auto Power to OFF - Using the ASK Proxima menus navigate to the *System* menu, which is found inside the *Settings* menu, and **UNCHECK** the *AUTO POWER* option.

Set Power Save to OFF - Using the ASK Proxima menus navigate to the *System* menu, which is found inside the *Settings* menu, and **UNCHECK** the *POWER SAVE* option.