



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232.

### 2. RS-232 Commands

Power On	Source: Video 1	Menu
Power Off	Source: Video 2	Adj Up
Volume (Absolute)	Source: Video 3	Adj Down
Blank On	Source: Computer 1	Select
Blank Off	Source: Computer 2	Mute On
	Source: Computer 3	Mute Off


### 3. Other Driver Features

*Default Power Status Feedback:* RS-232 Polling  
*Projector Restart Lockout Timer (Default):* 90 Seconds

## II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

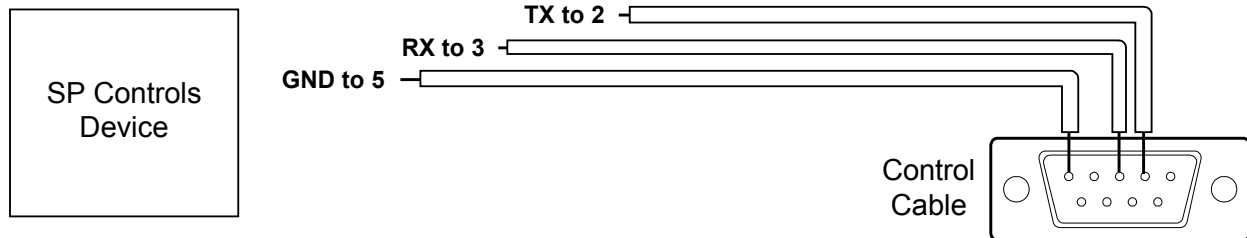

Connect female DB9 to projector port labeled *Serial Control*.  
*Serial Adapters* (for NRC only): None

## III. Projector Configuration

**Set Auto Source to OFF**– Using the ASK Proxima menus navigate to the *Sources* menu, which is found inside the *Settings* menu, and **UNCHECK** the *AUTO SOURCE* option.

**Set Auto Power to OFF** - Using the ASK Proxima menus navigate to the *System* menu, which is found inside the *Settings* menu, and **UNCHECK** the *AUTO POWER* option.

**Set Power Save to OFF** - Using the ASK Proxima menus navigate to the *System* menu, which is found inside the *Settings* menu, and **UNCHECK** the *POWER SAVE* option.