



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands


Power On	Source: Video	Menu On	Enter
Power Off	Source: Computer	Menu Off	Fine Sync Up
Volume Up	Audio Mute On	Adj Up	Fine Sync Down
Volume Down	Audio Mute Off	Adj Down	Freeze On
Auto Image	Video Mute On	Adj Left	Freeze Off
Normal	Video Mute Off	Adj Right	

3. Other Driver Features

Default Power Status Feedback: Power Current Sensor or None
Projector Restart Lockout Timer (Default): 98 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a male DB9 as follows:

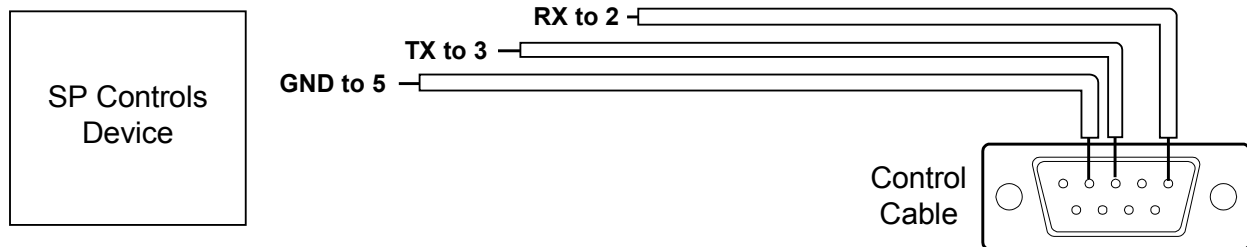

Connect male DB9 to the Canon serial adapter cable (included with projector), and connect to the projector port labeled *Control Port*.

Serial Adapters (for NRC only): A and B