



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

RS-232 Commands		IR Commands
Power On	Source: Video	Menu
Power Off	Source: Component	Adj Up
Volume (absolute)	Source: RGB	Adj Down
Blank On	Source: USB	Adj Left
Blank Off	Auto Source	Adj Right
		Enter
		Exit


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 62 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male DB9 as follows:

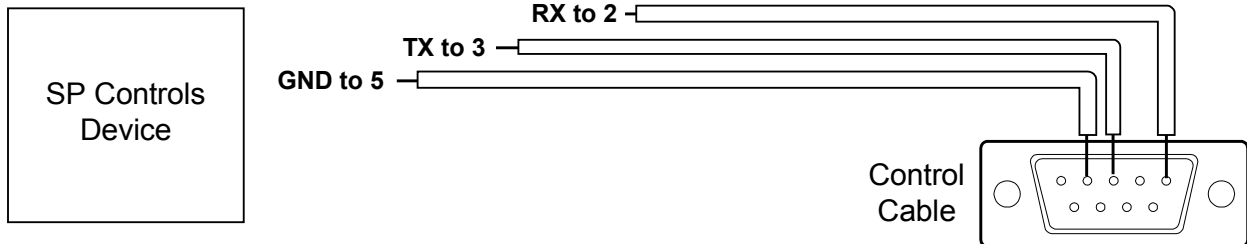

Connect male DB9 to the Casio serial adapter cable (Casio part no.YK-5), and connect the adapter cable to the projector control port.

Serial Adapters (for NRC only): A and B

III. Projector Information

The Casio XJ-S37 projector will not power off during the first 60 seconds after it is powered on. Do not attempt to turn it off with the control system during this time as the projector will not respond to the command.