



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On	Source: Composite Video	Menu	Left Click	Magnify Up
Power Off	Source: S-Video	Adjust Up	Right Click	Magnify Down
Volume Up	Source: VGA A	Adjust Down	Blank	Magnify Off
Volume Down	Source: VGA B	Adjust Left	Auto Image	P in P
Mute	Source: DVI	Adjust Right	Focus Up	Zoom Up
Freeze	Hide		Focus Down	Zoom Down

IR Commands

3. Other Driver Features


Default Power Status Feedback: Power Current Sensor or None

Projector Restart Lockout Timer (Default): 81 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male 6-pin mini-DIN connector as follows:

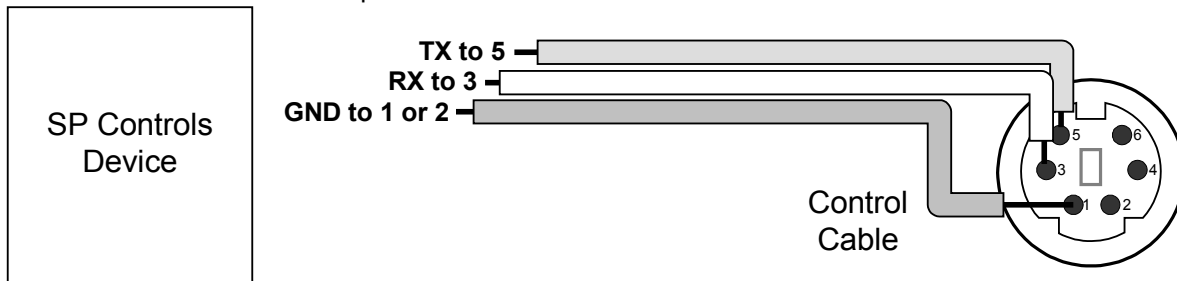

Connect male mini-DIN to projector port labeled RS-232.

Serial Adapters (for NRC only): n/a

Note: Dell does not provide a 6-pin adapter cable, so a 6-pin male DIN termination **must be ordered** prior to installation.