



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On	Source: Composite Video	Menu	Blank	Zoom Up
Power Off	Source: S-Video	Adjust Up	Auto Image	Zoom Down
Volume Up	Source: VGA	Adjust Down	Focus Up	P in P
Volume Down	Mute	Adjust Left	Focus Down	
	Freeze	Adjust Right	Magnify Up	
	Hide	Left Click	Magnify Down	
		Right Click	Magnify Off	

IR Commands


3. Other Driver Features

Default Power Status Feedback: Power Current Sensor or None
Projector Restart Lockout Timer (Default): 81 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male 6-pin mini-DIN connector as follows:

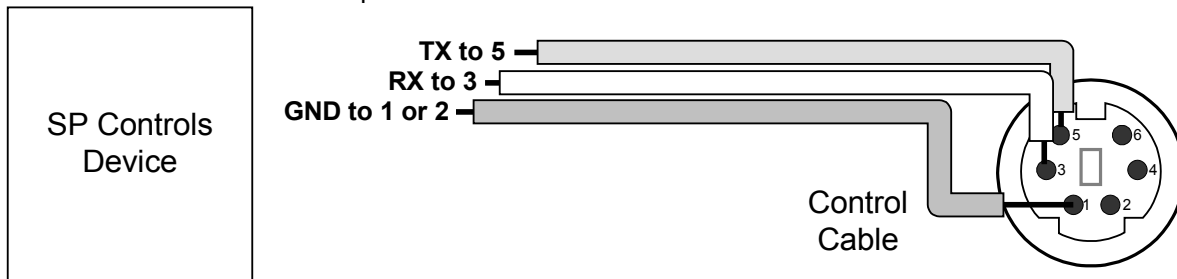

Connect male mini-DIN to projector port labeled *RS-232*.

Serial Adapters (for NRC only): n/a

Note: Dell does not provide a 6-pin adapter cable, so a 6-pin male DIN termination **must be ordered** prior to installation.