



## I. Driver Features

### 1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

### 2. RS-232 Commands


Power On	Source: VGA 1 Analog	Menu	Zoom In
Power Off	Source: VGA 2 Analog	Adjust Up	Zoom Out
Volume Up	Source: HDMI 1	Adjust Down	Mute On
Volume Down	Source: HDMI 2	Adjust Left	Mute Off
Source: Component	Source: Display Port	Adjust Right	Hide
Source: Composite Video	Source: Source Toggle	Enter	Unhide
Source: S-Video			

### 3. Other Driver Features

Default Power Status Feedback: RS-232 Power Polling  
 Projector Restart Lockout Timer (Default): 132 seconds

## II. RS-232 Control Wiring

Wire RS-232 control to a male DB9 connector as follows:

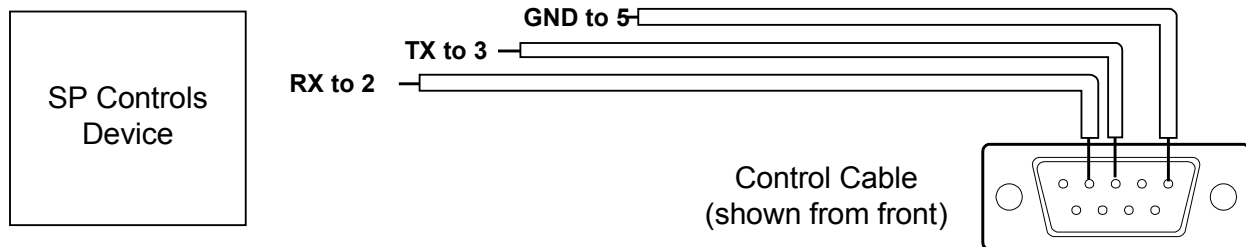

Connect male DB9 the Dell mini-DIN serial adapter cable (sold separately, Dell part no. P5024, SKU 310-5515). Connect adapter cable to projector port labeled RS-232.

Serial Adapters (for NRC only): A and B

## III. Special Projector Information

**Special Cable Required:** The Dell 7609WU requires an RS-232 cable that is **not included with the projector** – it must be separately ordered from Dell (Dell part no. P5024, SKU 310-5515).

**Set Auto Source to OFF:** To control this projector, the AUTO SOURCE function must be set to OFF. Navigate on the projector on-screen menus to the INPUT SEARCH menu, and set the AUTO SOURCE function to OFF.

**Note:** The Dell is extremely slow to switch to and from sources if no input signal is detected on the source.