



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232.

### 2. RS-232 Commands

Power On	Source: Video	Mute On
Power Off	Source: S-Video	Mute Off
Volume Up	Source: Component Video	Blank On
Volume Down	Source: Component HD	Blank Off
	Source: VGA 1	Auto Adjust
	Source: VGA 2	Source Scan Off
	Source: DVI	


### 3. Other Driver Features

*Default Power Status Feedback:* Power Current Sensor or None

*Projector Restart Lockout Timer (Default):* 50 Seconds

## II. RS-232 Control Wiring

Wire RS-232 control to a male DB9 as follows:

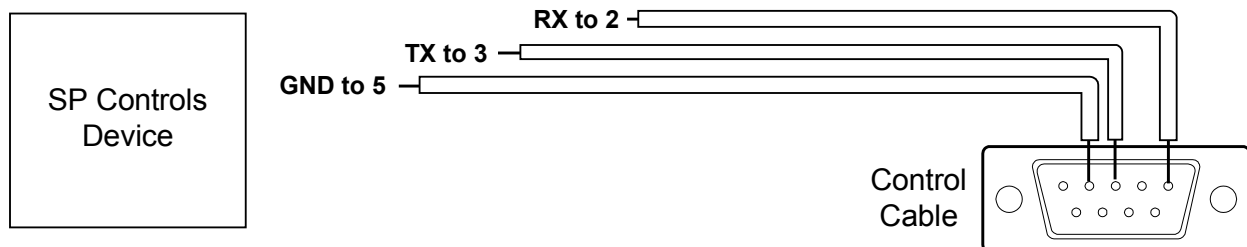

Connect male DB9 to projector port labeled *Computer In*.  
*Serial Adapters* (for NRC only): A and B

## III. Projector Configuration

SP Controls recommends setting Source Scan setting in the *Set Up* submenu to OFF, to ensure that the control device and projector remain in sync.