



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

IR Commands

Power On	Source: Video	Menu	Auto Image	Focus Up
Power Off	Source: S-Video	Adj Up	Freeze	Focus Down
Volume Up	Source: Component Video	Adj Down	Blank	Magnify Up
Volume Down	Source: RGB 1	Adj Left	Mute	Magnify Down
Keystone Up	Source: RGB 2	Adj Right	P in P	Magnify Off
Keystone Down	Source: DVI	Left Click	Zoom Up	
		Right Click	Zoom Down	


3. Other Driver Features

Default Power Status Feedback: RS-232 Power Polling
Projector Restart Lockout Timer (Default): 81 seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female HD15 as follows:

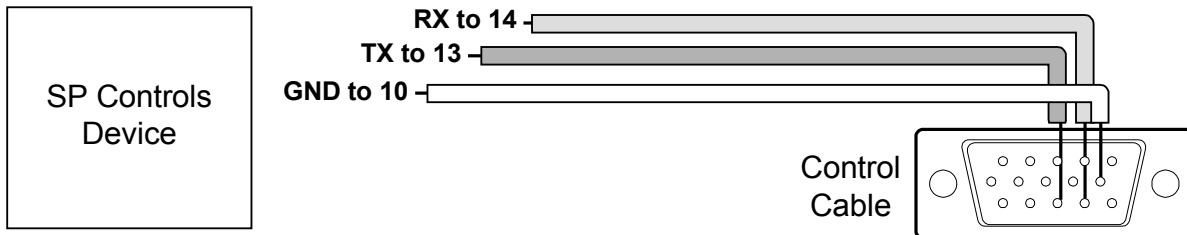

Connect female HD15 to projector port labeled *Control*.
Serial Adapters (for NRC only): B, C, and D