



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands


Power On	Source: Video (RCA)	Menu	Escape
Power Off	Source: S-Video	Adj Up	Resize
Volume Up	Source: Composite BNC	Adj Down	Freeze
Volume Down	Source: Computer (VGA)	Adj Left	Blank On
	Source: Computer (BNC)	Adj Right	Blank Off
		Enter	

3. Other Driver Features

Default Power Status Feedback: RS-232 Power Polling
Projector Restart Lockout Timer (Default): 75 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

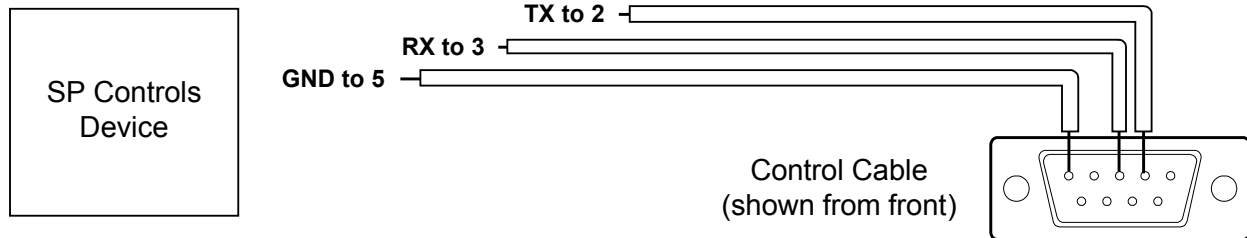

Connect female DB9 to the Epson intermediate serial adapter cable (included with projector). Connect the serial adapter to the projector port labeled *Mouse/Com1* on the right.
Serial Adapters (for NRC only): None

III. Projector Configuration

The Epson EMP-8100i is configured by default for **SLEEP MODE** and will automatically shut itself off after half an hour if it does not receive a signal. You may wish to disable this feature at the time of installation. To disable this feature, access the onscreen menu and toggle the DPMS setting to OFF.

Note: This Epson model is particularly slow to switch sources. This is unrelated to external control.