



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On	Source: Video	Source: Video 2 (YPbPr)	Menu	Enter
Power Off	Source: S-Video	Source: Video 2 (YCbCr)	Adj Up	Escape
Volume Up	Source: Video 1 (YPbPr)	Source: Computer 1	Adj Down	AV Mute
Volume Down	Source: Video 1 (YCbCr)	Source: Computer 2	Adj Left	E-Zoom Up
			Adj Right	E-Zoom Down

IR Commands


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 50 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

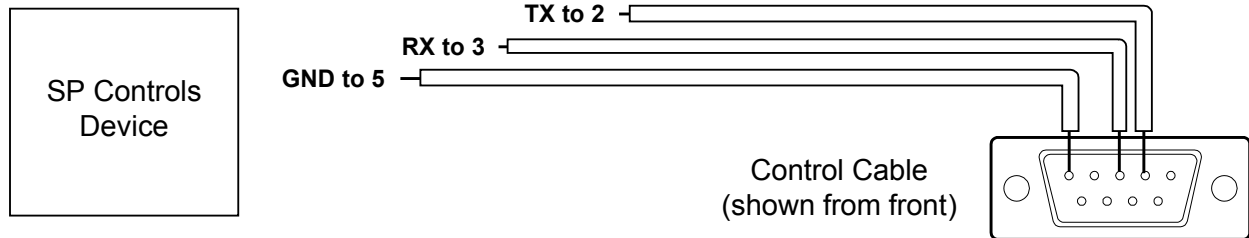

Connect female DB9 to projector port labeled *Control (RS-232c)*.
Serial Adapters (for NRC only): None

III. Projector Configuration

The PowerLite 54C's performance can be influenced by a number of its settings. For best control of this projector, access the projector onscreen menus and set the following to **OFF**:

- Turn off SLEEP MODE in the Setting Menu.
- Turn off STARTUP SCREEN in the Advanced Menu.
- Turn off MESSAGE in the Setting Menu.