



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232.

### 2. RS-232 Commands

Power On	Source: Video	Menu	AV Mute
Power Off	Source: S-Video	Adj Up	E-Zoom Up
Volume (absolute)	Source: Comp Vid 1	Adj Down	E-Zoom Down
	Source: Comp Vid 2	Adj Left	Freeze
	Source: PC 1	Adj Right	Help
	Source: PC 2	Enter	
		Escape	


### 3. Other Driver Features

*Default Power Status Feedback:* RS-232 Polling

*Projector Restart Lockout Timer (Default):* 30 Seconds

## II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

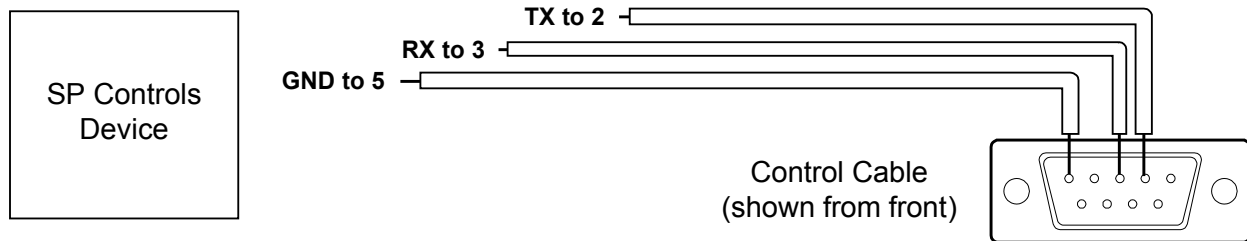

Connect female DB9 to projector port labeled *Control (RS-232C)*.

*Serial Adapters (for NRC only):* None

## III. Projector Configuration

To allow control from the SmartPanel, the Epson PowerLite 81p *must* be set to COM Port > RS-232C in the *EXTENDED* projector menu.

Activate the projector onscreen menu. Scroll down to the *EXTENDED* menu. Verify the *COM Port* setting is set to *RS-232C*. If not, set the projector to *RS-232C*.