



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands

Power On	Source: Video	Menu	A/V Mute
Power Off	Source: S-Video	Adj Up	E-Zoom Up
Volume (Level)	Source: Comp 1	Adj Down	E-Zoom Down
	Source: Comp 1	Adj Left	Freeze
	Source: USB	Adj Right	
	Source: USB Display	Enter	
	Source: LAN	Escape	


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling

Projector Restart Lockout Timer (Default): 15 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

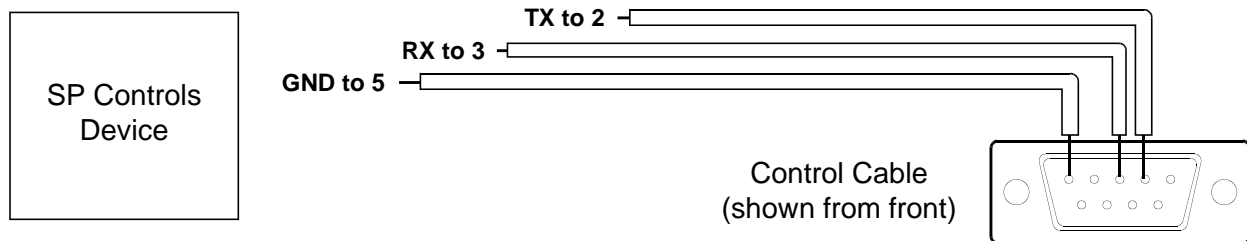

Connect female DB9 to projector port labeled *RS-232C*.

Serial Adapters (for NRC only): None

III. Projector Configuration

Standby Mode: The *Standby Mode* must be set to *Communication On* or the PowerLite will not respond to Power On commands. In the projector *Extended* submenu, set *Standby mode* to *Communication On* and restart the projector.