



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands


Power On	Source: Video	Menu	Enter
Power Off	Source: S-Video	Adj Up	Escape
Volume (Absolute)	Source: Component (VGA)	Adj Down	E-Zoom Up
AV Mute	Source: Component (YPbPr)	Adj Left	E-Zoom Down
	Source: Component (YCbCr)	Adj Right	Freeze

3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 90 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

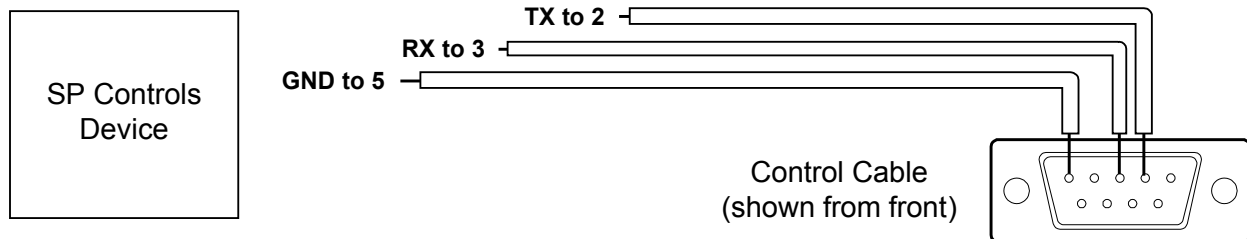

Connect female DB9 to projector port labeled *Control (RS-232C)*.
Serial Adapters (for NRC only): None

III. Projector Configuration

For best control of this projector set the following to **OFF** in the projector's onscreen menus:

- Turn off SLEEP MODE – go to the Setting Menu.
- Turn off STARTUP SCREEN – go to the Setting -> Display Menu.
- Turn off DISPLAY MESSAGE – go the Setting -> Display Menu.