



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On	Source: Video
Power Off	Source: S-Video
Volume Up	Source: Component Video
Volume Down	Source: RGB 1
Keystone Up	Source: RGB 2
Keystone Down	Source: DVI

IR Commands

Menu	Freeze	Zoom Up
Adj Up	Blank	Zoom Down
Adj Down	Auto Image	Magnify Up
Adj Left	Focus Up	Magnify Down
Adj Right	Focus Down	Magnify Off
Left Click	Mute	
Right Click	P in P	


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 80 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female HD15 as follows:

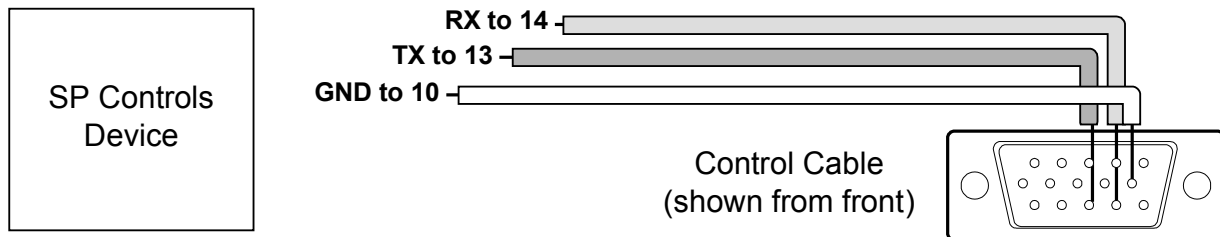

Connect female HD15 to projector port labeled *CONTROL*.
Serial Adapters (for NRC only): B, C, and D