



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

IR Commands

Power On	Source: Video	Menu	Freeze	Zoom Up
Power Off	Source: S-Video	Adj Up	Blank	Zoom Down
Volume Up	Source: Component Video	Adj Down	Auto Image	Magnify Up
Volume Down	Source: RGB 1	Adj Left	Focus Up	Magnify Down
Keystone Up	Source: RGB 2	Adj Right	Focus Down	Magnify Off
Keystone Down	Source: DVI	Left Click	Mute	
		Right Click	P in P	


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 80 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female HD15 as follows:

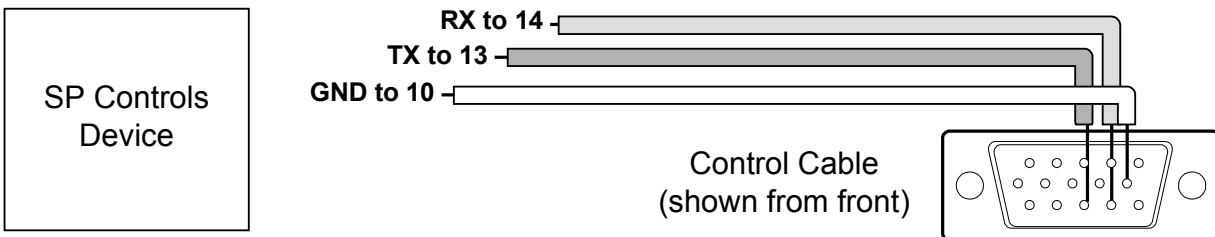

Connect female HD15 to projector port labeled *CONTROL*.
Serial Adapters (for NRC only): B, C, and D