



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

| | | | | |
|---------------|-------------------------|-------------|--------------|------------|
| Power On | Source: Video | Menu | Auto Image | Mute |
| Power Off | Source: S-Video | Adj Up | Freeze | P in P |
| Volume Up | Source: Component Video | Adj Down | Blank | Zoom Up |
| Volume Down | Source: RGB 1 | Adj Left | Magnify Up | Zoom Down |
| Keystone Up | Source: RGB 2 | Adj Right | Magnify Down | Focus Up |
| Keystone Down | Source: DVI | Left Click | Magnify Off | Focus Down |
| Mute On | Blank On | Right Click | | |
| Mute Off | Blank Of | | | |

IR Commands


3. Other Driver Features

Default Power Status Feedback: RS-232 Power Polling
Projector Restart Lockout Timer (Default): 80 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female HD15 as follows:

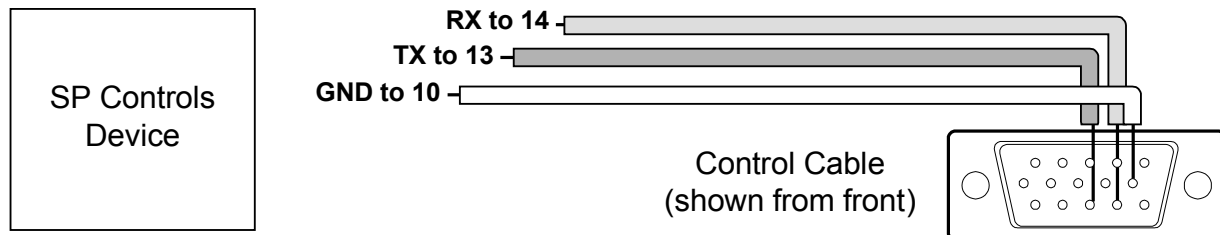

Connect female HD15 to projector port labeled *CONTROL*.
Serial Adapters (for NRC only): B, C, and D