



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

RS-232 Commands		IR Commands		
Power On	Source: Video	Auto Adjust	Blank On	Menu
Power Off	Source: S-Video	Mute On	Blank Off	Adj Up
Volume Up	Source: Component Video	Mute Off		Adj Down
Volume Down	Source: RGB 1	Keystone Up		Adj Left
	Source: RGB 2	Keystone Down		Adj Right


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 78 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

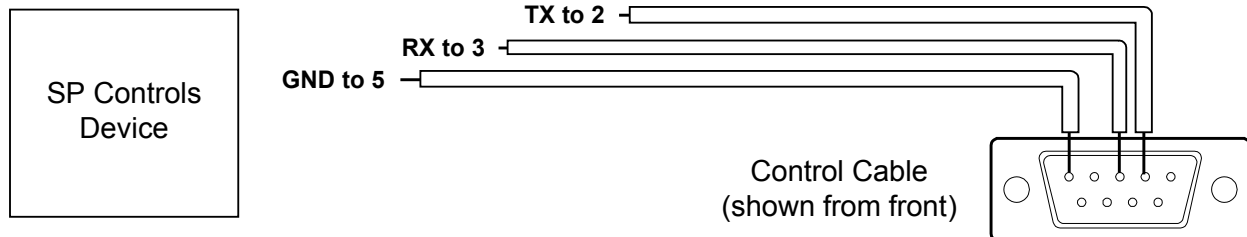

Connect female DB9 to projector port labeled *Control*.
Serial Adapters (for NRC only): None