



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On
Power Off
Source: Video
Source: S-Video
Source: Component Video
Source: Computer 1 (Dsub)
Source: Computer 2 (RGBHV)

IR Commands

Volume Up	Menu-Enter	Zoom "T"
Volume Down	Adj Up	Zoom "W"
AV Mute	Adj Down	Focus Up
Preset	Adj Left	Focus Down
Quick Align	Adj Right	
	Enter	
	Back Page	


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 140 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

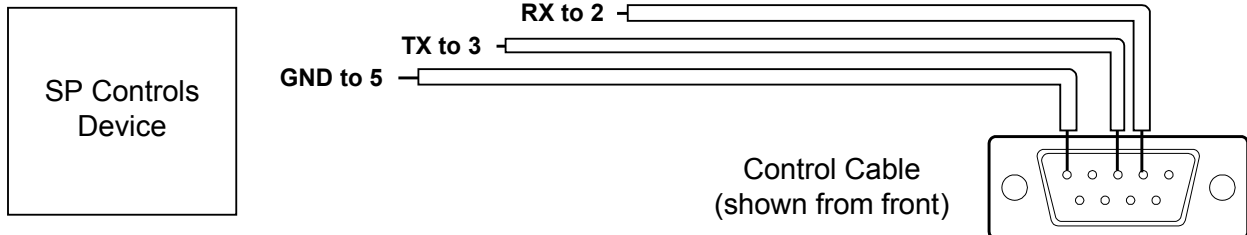

Connect female DB9 to projector port labeled *CONTROL - RS-232C*.
Serial Adapters (for NRC only): B