



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

IR Commands

| | | |
|-------------------|-------------|--------------|
| Power On | Volume Up | P in P |
| Power Off | Volume Down | Swap |
| Source: Video | Menu | Sub Input |
| Source: S-Video | Adj Up | Twin Picture |
| Source: Component | Adj Down | Zoom Up |
| Source: RGB | Adj Left | Zoom Down |
| Source: DVI | Adj Right | Repeat |
| | Enter | |


3. Other Driver Features

Default Power Status Feedback: None
Projector Restart Lockout Timer (Default): 10 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

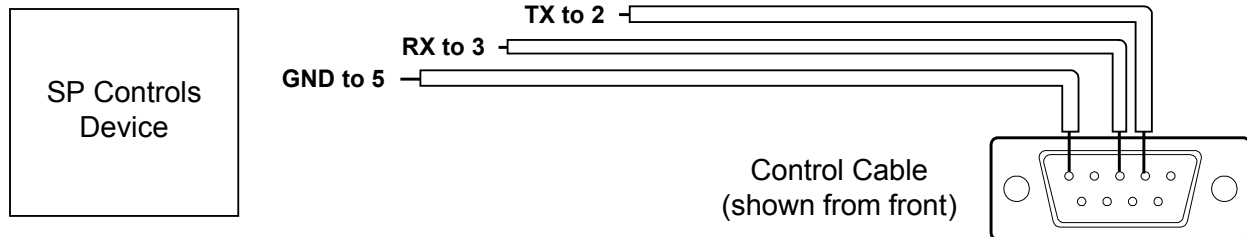

Connect female DB9 to projector port labeled RS-232C.
Serial Adapters (for NRC only): None