



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands

| | | | |
|-------------------|--------------------|-----------|---------------|
| Power On | Source: Video 1 | Menu | Auto Position |
| Power Off | Source: Video 2 | Adj Up | Still |
| Volume (absolute) | Source: Computer 1 | Adj Down | Expand |
| Focus/Zoom | Source: Computer 2 | Adj Left | Mute |
| Focus/Zoom Up | | Adj Right | P in P |
| Focus/Zoom Down | | Enter | |


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling

Projector Restart Lockout Timer (Default): 100 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

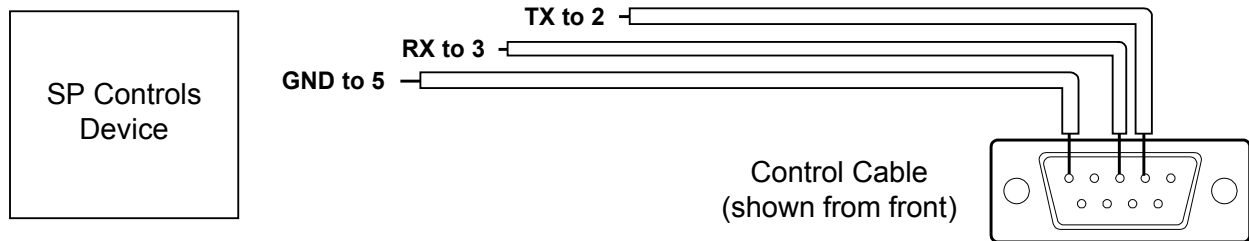

Connect female DB9 to the projector port labeled *RS-232C*.
Serial Adapters (for NRC only): None