



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

IR Commands

Power On	Pic Mute On	Menu	Volume Up	Auto Adjust
Power Off	Pic Mute Off	Adj Up	Volume Down	
Source: Video		Adj Down	Freeze	
Source: S-Video		Adj Left	Keystone Up	
Source: RGB 1		Adj Right	Keystone Down	
Source: RGB 2		Select	Magnify Up	
Source: PC Card		Cancel	Magnify Down	


3. Other Driver Features

Default Power Status Feedback: None
 Projector Restart Lockout Timer (Default): 75 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male DB9 as follows:

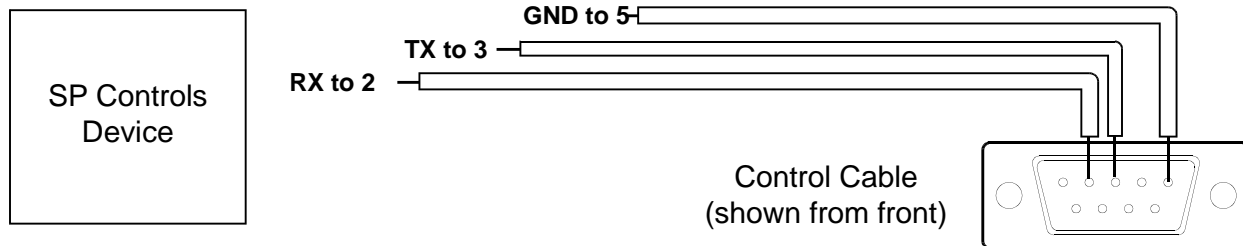

Connect male DB9 to projector mini-DIN serial adapter cable (included with projector), and connect mini-DIN to port labeled *PC Control*.

Serial Adapters (for NRC only): A and B