



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands

| | | | |
|-------------|---------------------|-----------|------------------|
| Power On | Source: Video | Menu | Picture Mute On |
| Power Off | Source: S-Video | Adj Up | Picture Mute Off |
| Volume Up | Source: RGB | Adj Down | Sound Mute On |
| Volume Down | Source: DVI-Digital | Adj Left | Sound Mute Off |
| | Source: DVI-Analog | Adj Right | Auto Adjust On |
| | | Enter | Auto Adjust Off |
| | | Cancel | |


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling

Projector Restart Lockout Timer (Default): 93 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

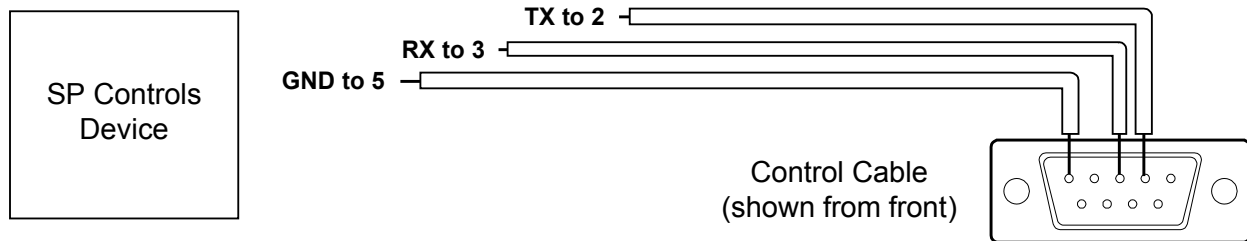

Connect female DB9 to projector port labeled *RS-232*.

Serial Adapters (for NRC only): None

III. Additional Projector Information

The NEC NP500 projector will not power off during the first 70 seconds after it is powered on. Do not attempt to turn it off during this time as the projector will not respond to the command.