



## I. Driver Features

### 1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

### 2. RS-232 Commands

### IR Commands

Power On	Pic Mute On	Menu	Volume Up	Auto Adjust
Power Off	Pic Mute Off	Adj Up	Volume Down	Keystone Up
Source: Video		Adj Down	Select	Keystone Down
Source: S-Video		Adj Left	Cancel	Magnify Up
Source: RGB 1		Adj Right	Aspect	Magnify Down
				Freeze


### 3. Other Driver Features

Default Power Status Feedback: None  
 Projector Restart Lockout Timer (Default): 80 Seconds

## II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male 8-pin mini-DIN as follows:

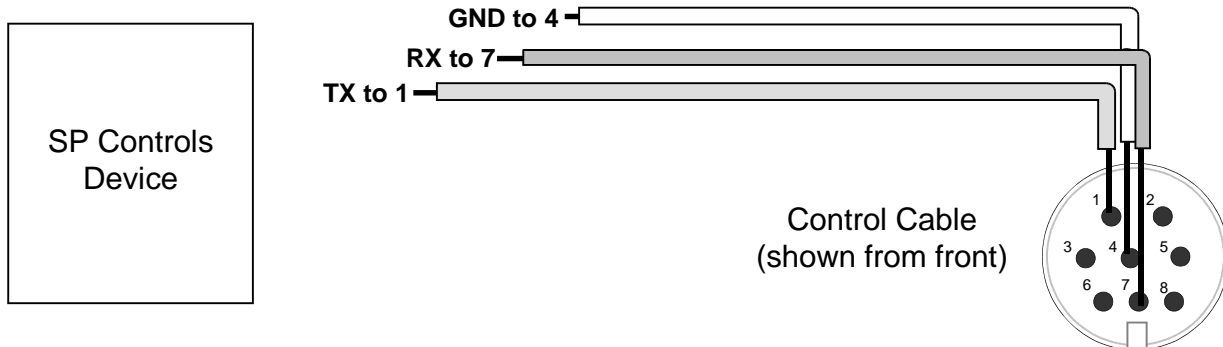

Connect male mini-DIN to port labeled *PC Control*.

*Serial Adapters* (for NRC only): N/A