



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232.

### 2. RS-232 Commands

Power On	Source: Composite Video	Menu	Zoom
Power Off	Source: Component Video	Adj Up	Keystone
Volume Up	Source: S-Video	Adj Down	Brightness
Volume Down	Source: HDTV	Adj Left	Contrast
	Source: Analog RGB	Adj Right	
	Source: Digital RGB	Enter	
	Source: PC	Freeze	


### 3. Other Driver Features

*Default Power Status Feedback:* RS-232 Polling

*Projector Restart Lockout Timer (Default):* 65 Seconds

## II. RS-232 Control Wiring

Wire RS-232 control to a male DB9 as follows:

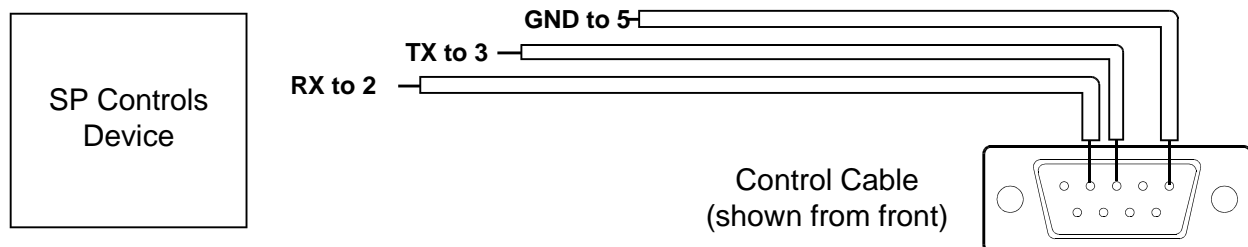

Connect male DB9 to projector port labeled *RS-232*.

*Serial Adapters* (for NRC only): A and B

## Warning – SP Controls does NOT recommend use of this projector

The Optoma EP757 employs auto synchronization to find a source to display. This may cause the source displayed to be different than the source selected. As of current there is no way to disable this functionality.

*To prevent this type of behavior:*

Use four sources with this projector. Be sure that the signals are active. This will ensure that the projector will only switch to the specified source.