



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands

Power On	Source: Video	Mute On
Power Off	Source: S-Video	Mute Off
Volume (level)	Source: VGA 1	Freeze
	Source: VGA 1 - SCART	Unfreeze
	Source: VGA 1 - Component	Zoom Up
	Source: DVI Analog	Zoom Down
	Source: DVI Digital	


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling

Projector Restart Lockout Timer (Default): 120 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

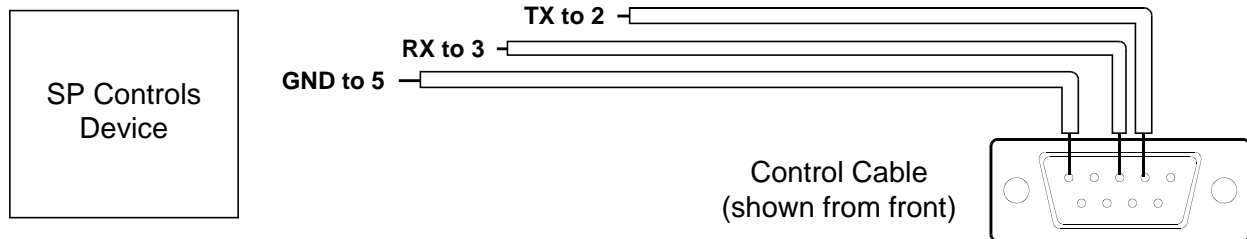

Connect female DB9 to Optoma cable (**must be separately ordered** – Optoma part no. *BC-RDRMYX02*)
Serial Adapters (for NRC only): None

III. Projector Information

Attention: The EX525ST requires an RS-232 adapter cable that must be separately ordered from Optoma (part no. *BC-RDRMYX02*).