



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On	Source: Video	Zoom Up	Menu	Freeze
Power Off	Source: S-Video	Zoom Down	Adj Up	Magnify Up
Volume (level)	Source: RGB	Focus Up	Adj Down	Magnify Down
	Source: PC Card	Focus Down	Adj Left	Keystone Up
			Adj Right	Keystone Down
			Select	

IR Commands


3. Other Driver Features

Default Power Status Feedback: None
Projector Restart Lockout Timer (Default): 65 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male DB9 as shown. Connect DB9 cable to PLUS serial mouse adapter cable (included with projector).

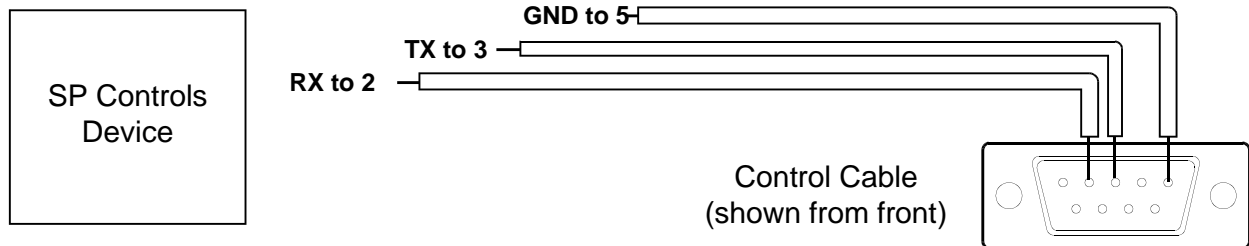

Connect the PLUS adapter cable to projector port labeled *MOUSE*.
Serial Adapters (for NRC only): A & B