



## I. Driver Features

### 1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

### 2. RS-232 Commands

Power On	Source: Video	Menu	Auto Setup	Digital Zoom Up
Power Off	Source: S-Video	Adj Up	Mute	Digital Zoom Down
Volume (level)	Source: RGB 1	Adj Down	Freeze	
	Source: RGB 2	Adj Left	Standard	
		Adj Right	Index Window	
		Enter		

### IR Commands


### 3. Other Driver Features

*Default Power Status Feedback:* RS-232 Polling  
*Projector Restart Lockout Timer (Default):* 67 Seconds

## II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male DB9 as follows:

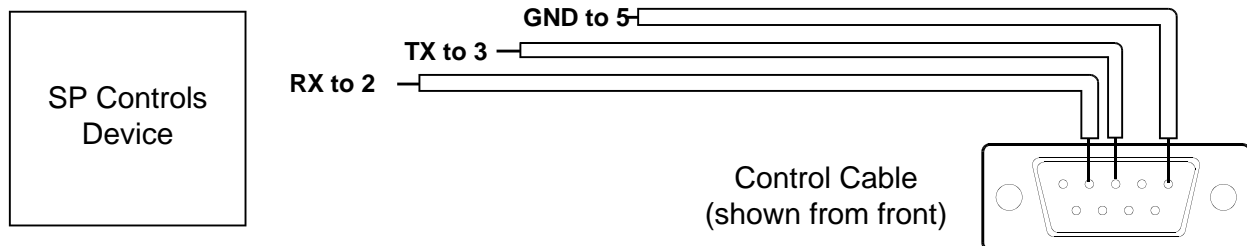

Connect male DB9 to projector port labeled *RS-232*.  
*Serial Adapters* (for NRC only): A and B