



## I. Driver Features

### 1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

### 2. RS-232 Commands

Power On	Source: RGB 1	Menu	Auto Setup
Power Off	Source: RGB 2	Adj Up	Mute
Volume (level)	Source: RGB 3	Adj Down	Freeze
Source: Video	Source: DVI	Adj Left	Index Window
Source: S-Video	Source: Network	Adj Right	Digital Zoom Up
	Source: SD Card	Enter	Digital Zoom Down

### IR Commands


### 3. Other Driver Features

*Default Power Status Feedback:* RS-232 Polling  
*Projector Restart Lockout Timer (Default):* 94 Seconds

## II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male DB9 as follows:

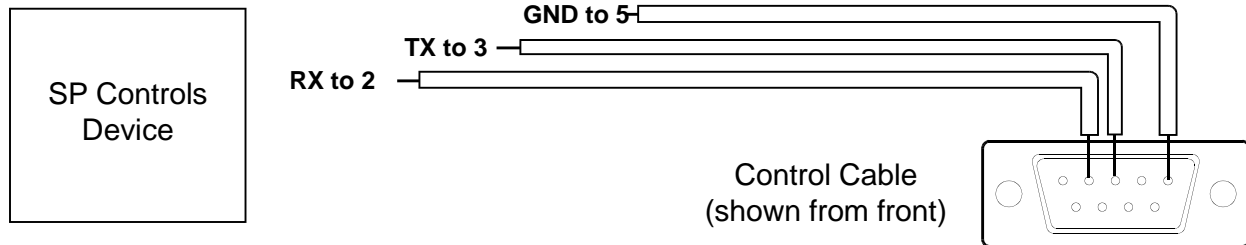

Connect male DB9 to projector port labeled *Serial*.  
*Serial Adapters* (for NRC only): A and B