



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

RS-232 Commands		IR Commands	
Power On	Source: Video 1	Menu	Zoom Up
Power Off	Source: Video 2	Adj Up	Zoom Down
Volume (level)	Source: RGB 1	Adj Down	Focus Up
Blank On	Source: RGB 2	Adj Left	Focus Down
Blank Off		Adj Right	Timer
		Left Click	Blank
		Right Click (Reset)	Position
			Mute


3. Other Driver Features

Default Power Status Feedback: None
Projector Restart Lockout Timer (Default): 80 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male HD15 as follows:

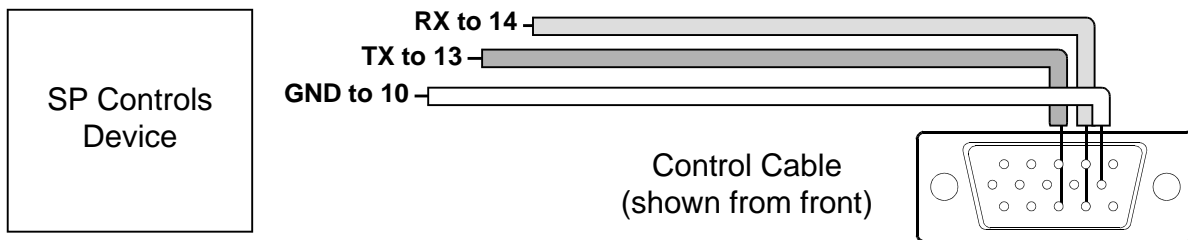

Connect male HD15 to projector port labeled *CONTROL*.
Serial Adapters (for NRC only): B and C

III. Projector Configuration

- **Baud Rate:** The Proxima projector may be configured via the onscreen menus to accept RS-232 control over a range of speeds. This Driver assumes control will take place at 1200bps. Verify that the projector is set to 1200bps in the onscreen *OPT. (OPTIONS) Menu: COM. SPEED* setting. If not, set the projector to 1200.
- **Data Word:** This Driver assumes control will take place with 7 data bits, no parity bit, and one stop bit (**7N1**). Insure that the projector is set to 7N1 in the onscreen *OPT. (OPTIONS) Menu: COM. BITS* setting. If not, set the projector to 7N1.