



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands


Power On	Source: Video 1	Menu	Mute On
Power Off	Source: Video 3	Adj Up	Mute Off
Volume (level)	Source: Video 3	Adj Down	Blank On
	Source: Computer 1	Adj Left	Blank Off
	Source: Computer 2	Adj Right	
	Source: Computer 3	Select	

3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 90 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

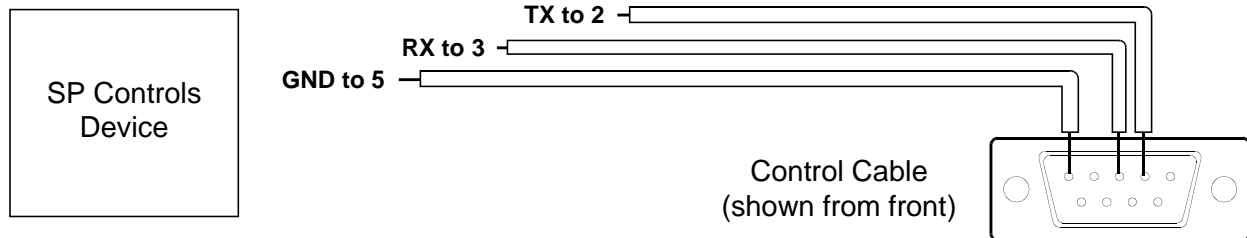

Connect female DB9 to projector port labeled *Serial Control*.
Serial Adapters (for NRC only): None

III. Projector Configuration

Set Auto Source to OFF– Using the Proxima menus navigate to the *Sources* menu, which is found inside the *Settings* menu, and **UNCHECK** the *AUTO SOURCE* option.

Set Auto Power to OFF - Using the Proxima menus navigate to the *System* menu, which is found inside the *Settings* menu, and **UNCHECK** the *AUTO POWER* option.

Set Power Save to OFF - Using the Proxima menus navigate to the *System* menu, which is found inside the *Settings* menu, and **UNCHECK** the *POWER SAVE* option.