



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

| | | | | |
|-------------|--------------------|-----------|-------------|--------------|
| Power On | Source: Video 1 | Adj Up | Fine Sync + | IR Commands |
| Power Off | Source: Video 2 | Adj Down | Fine Sync - | |
| Volume Up | Source: Computer 1 | Adj Left | Zoom | |
| Volume Down | Source: Computer 2 | Adj Right | Focus | |
| | | Enter | Normal | |
| | | | | Menu |
| | | | | +Adjust Up |
| | | | | +Adjust Down |
| | | | | +Volume Up |
| | | | | +Volume Down |


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 75 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male DB9 as follows:

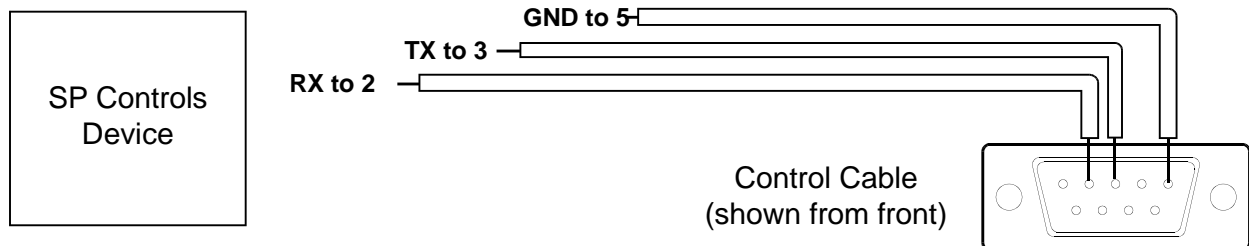

Connect male DB9 to the Proxima DB9/mini-DIN serial adapter cable to the projector port labeled *CONTROL PORT2*.

Serial Adapters (for NRC only): A and B