



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands

Power On	Source: Video 1	Menu	Fine Sync +	Freeze On
Power Off	Source: Video 2	Adj Up	Fine Sync -	Freeze Off
Volume Up	Source: Computer 1	Adj Down	Zoom	Blank On
Volume Down	Source: Computer 2	Adj Left	Focus	Blank Off
		Adj Right	Normal	Mute On
		Enter		Mute Off


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 75 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male DB9 as follows:

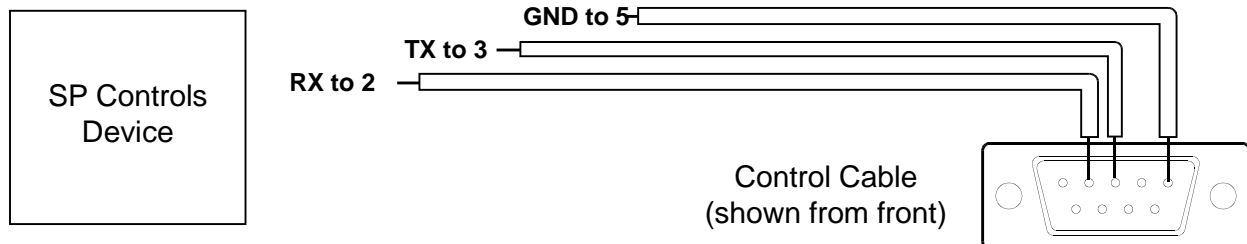

Connect male DB9 to the Proxima DB9/mini-DIN serial adapter cable to the projector port labeled *PC Control 2*. Note: the projector **cannot be controlled** through *PC Control 1*.
Serial Adapters (for NRC only): A and B