



## I. Driver Features

### 1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

### 2. RS-232 Commands

2. RS-232 Commands		IR Commands		
Power On	Source: Video 1	Zoom	+Volume Up	Digital Zoom
Power Off	Source: Video 2	Focus	+Volume Down	Normal
Volume Up	Source: Computer 1	Enter	Menu	No Show/Freeze
Volume Down	Source: Computer 2		Adjust Up	Lens Up
			Adjust Down	Lens Down
			Adjust Left	Auto Adjust
			Adjust Right	Mute


### 3. Other Driver Features

Default Power Status Feedback: None  
Projector Restart Lockout Timer (Default): 110 Seconds

## II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

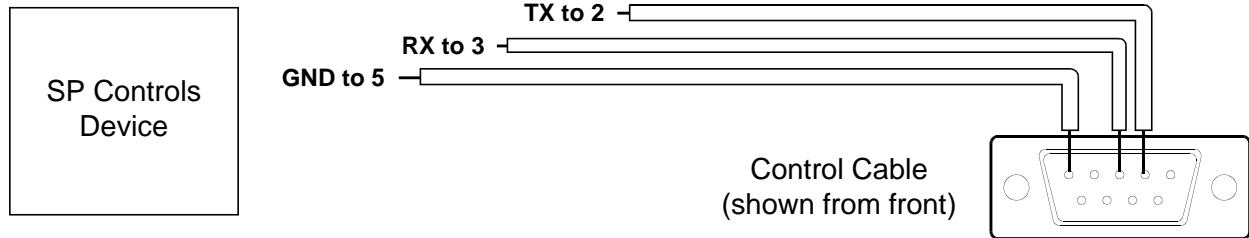

Connect female DB9 to the projector port labeled *Serial* in the *PC OUT* section of the projector patch panel.

Serial Adapters (for NRC only): None

## III. Projector Information

**Disable Power Management mode:** Power management is set via on screen menus, *Setting: Power Management*.