



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232.

### 2. RS-232 Commands


Power On	Source: Video	Mute
Power Off	Source: S-Video	Blank
Volume (level)	Source: VGA 1	Freeze
	Source: VGA 2	Auto Image
	Source: HDMI	Keystone

### 3. Other Driver Features

*Default Power Status Feedback:* RS-232 Polling  
*Projector Restart Lockout Timer (Default):* 40 seconds

## II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

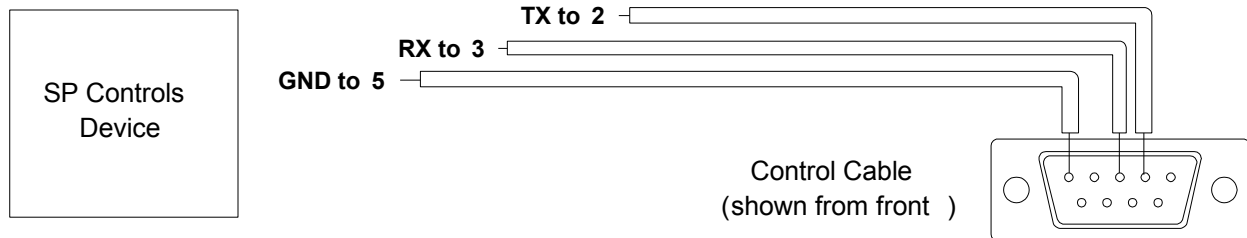

*Serial Adapters (for NRC only):* None

## III. Projector Information

**Attention:** Vivitek's *AUTO SOURCE* feature must be disabled or the control system will not be able to control input selection. In the projector *INSTALLATION II* menu, select *AUTO SOURCE* and set to OFF.