



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232.

### 2. RS-232 Commands


Power On	Source: Video	Mute
Power Off	Source: VGA 1	Blank
Volume +	Source: HDMI	Freeze
Volume -		Auto Image
	Up	Keystone+
	Down	Keystone -
	Left	Enter
	Right	Menu

### 3. Other Driver Features

Default Power Status Feedback: RS-232 Polling  
Projector Restart Lockout Timer (Default): 40 seconds

## II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

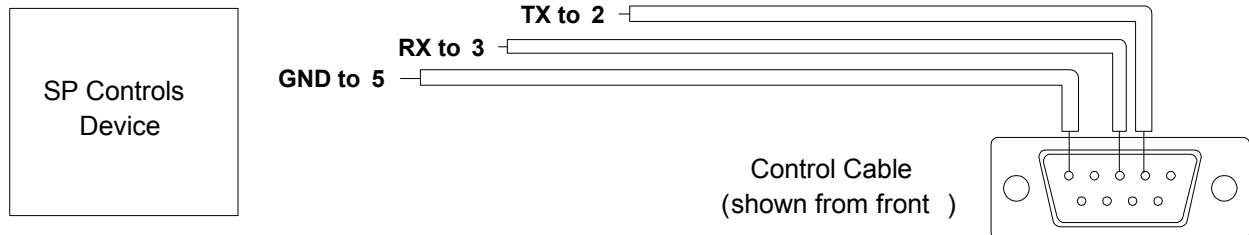

Serial Adapters (for NRC only): None

## III. Projector Information

**Attention:** Vivitek's *AUTO SOURCE* feature must be disabled or the control system will not be able to control input selection. In the projector *INSTALLATION II* menu, select *AUTO SOURCE* and set to OFF.